PUSH CARTS

To modify this design consult the Technical Section H of the Creform Catalog or your Creform sales engineer.

All dimensions in metric units. For example H-884 is 884mm in length.

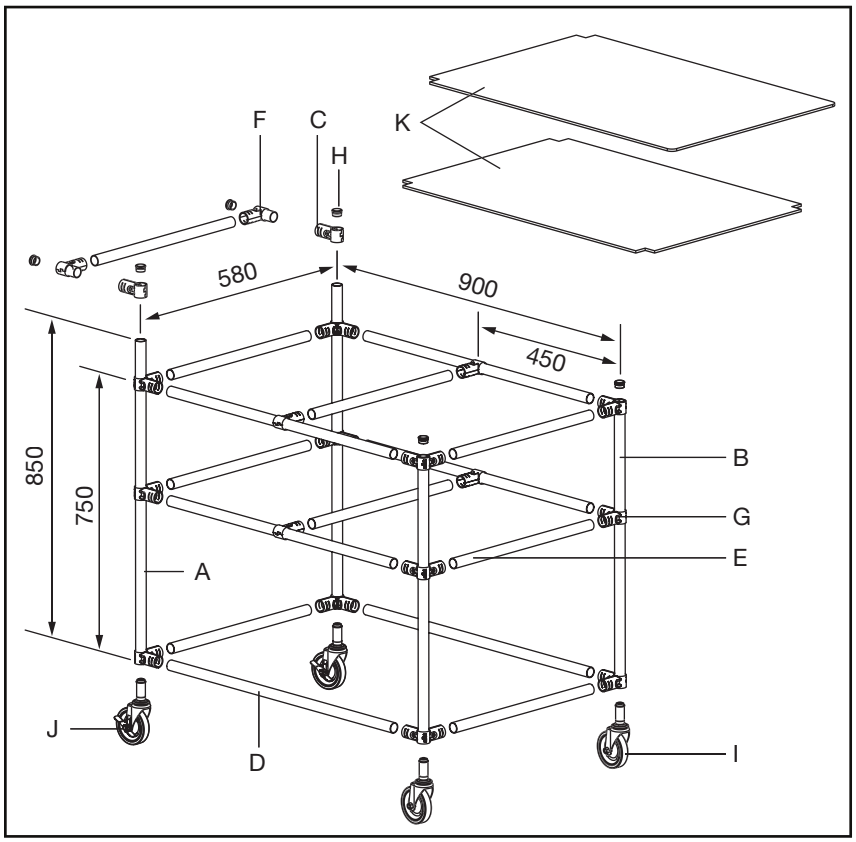

Height w/Caster 880.

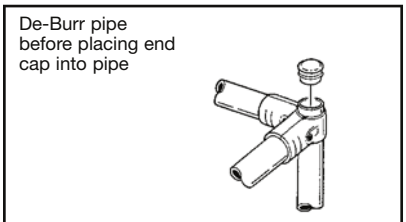

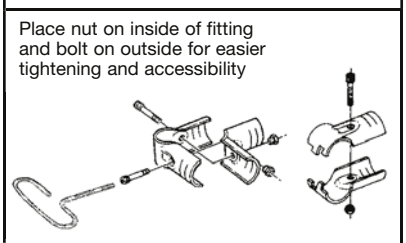

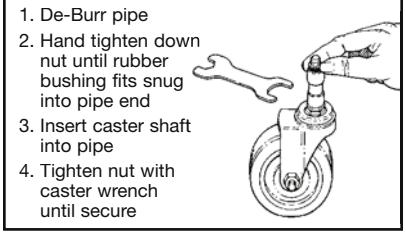

Bill of Material

		Name	Quantity
A	**Pipes (Height)**	H-884	2
B		H-784	2
C	**Pipes (Length)**	H-64	2
D		H-830	6
E	**Pipes (Width)**	H-510	9
F	**Components**	HJ-1	8
G		HJ-2	12
H		J-110	6
I		YGR-100	2
J		YGR-100S	2
K		Surface 935 x 615	2
L		Velcro 1" x 4"	12 Set

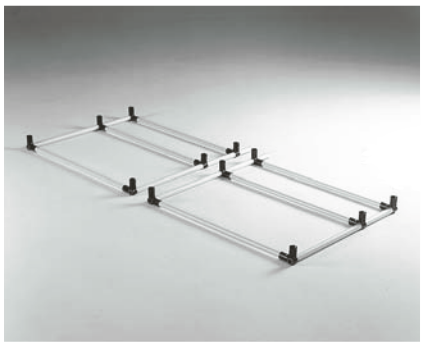

Assemble two sides on flat surface with metal joints pointing up. Finger tighten bolts and nuts.

Insert horizontal support pipes in one side first. Tighten bolts and nuts. Attach second side.

Assemble all remaining cross members, handle, and insert casters. Place two-piece velcro on pipes.

Remove protective tape from velcro and carefully place boards in position.